 
 





 



 

 

 
 


 





 
 





 
 




Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Shift + Power
	HDMI 1		1
	HDMI 2		2
	Comp.		3
	Video		4
	S-Video		5
	PC		Fav / Marker / PC
	PC		6
	Lens		Zoom / Size
	Hide		Sleep / Timer
	Aspect		Picture / Format
	Test		Text / Goto
	Up		Up
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Menu		Menu / Home
	Back		Back / Return
	Cinema 1		Shift + 1
	Cinema 2		Shift + 2
	Cinema 3		Shift + 3
	Natural		Shift + 4
	Stage		Shift + 5
	Dynamic		Shift + 6
	User 1		Shift + 7
	User 2		Shift + 8
	THX		Shift + 9
	Gamma		Red / Netflix / Search
	C.Temp		Green / APP / Repeat
	Lens AP.		Yellow / YouTube / Repeat
	Pic. Adj.		Blue / Prime Video / Random

