




 

 

 



 

 





 

 







 



 










 





 






 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	FM		Smart
	AM		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	Sleep		Sleep
	Sound Mode		Dual
	FM Mode		TV/R

Originalfernbedienung Ersatzfernbedienung

	S.A. Bass		Options
	Tape A		Red
	Tape B		Green
	Direction		Pre Ch
	Repeat		Text
	Pause		Pause
	CD Control		Yellow
	Play CD		Play
	Stop CD		Stop
	Rec Pause		Rec
	Volume+		Vol +
	Volume-		Vol -
	I<< CD		I<<
	<< CD		<<
	>>I CD		>>I
	>> CD		>>
	Play Tape		Shift + Play


 



 


 



 








 












Originalfernbedienung Ersatzfernbedienung

	Stop Tape	 + 	Shift + Stop
	Tape Control		Blue
	AUX		AV
	>> Tape	 + 	Shift + >>
	<< Tape	 + 	Shift + <<
	Disc 1		Subt
	Disc 2		Format
	Disc 3		Eject
	PTY/EON		Menu
	Display Mode		Info
	Select-		Ch -
	Select+		Ch +
	>> Tuning		Up
	<< Tuning		Down
	l<< Tuning		Left
	>>l Tuning		Right
	1 CD	 + 	Shift + 1

Originalfernbedienung Ersatzfernbedienung

	2 CD	 + 	Shift + 2
	3 CD	 + 	Shift + 3
	4 CD	 + 	Shift + 4
	5 CD	 + 	Shift + 5
	6 CD	 + 	Shift + 6
	7 CD	 + 	Shift + 7
	8 CD	 + 	Shift + 8
	9 CD	 + 	Shift + 9
	10 CD	 + 	Shift + 0
	+10 CD	 + 	Shift + Guide

