



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide
	+10		Pre Ch
	Display		Info
	Cancel		Exit
	Top Menu		Shift + Menu
	Return		Shift + Back

Originalfernbedienung Ersatzfernbedienung

	Set Up		Options
	Set		D. Menu
	Menu		Menu
	On Screen		Red
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Play DVD/CD		Play
	FM/AM/AUX		TV/R
	Disc Select		Blue
	<> Tape		Yellow
	Pause		Pause
	Stop		Stop
	Disc Rec Mode		Rec





Originalfernbedienung Ersatzfernbedienung

	I<<<		I<<<
	>>>I		>>>I
	<<</Slow-		<<<
	>>>/Slow+		>>>
	Sleep		Sleep
	Clock/Timer		AV
	Dimmer		Media
	A.Standby		Shift + Power
	Bass/Treble		Shift + Dual
	Fade Muting		Mute
	Rhythm AX		Smart
	Vol+		Vol +
	Vol-		Vol -
	Repeat		Text
	FM Play Mode		Green
	Repeat A-B		Shift + Text
	REV Mode		Shift + Rec

Originalfernbedienung Ersatzfernbedienung

	I<<< Group/Title		Ch -
	Group/Title >>>I		Ch +
	Audio		Dual
	Subtitle		Subt
	Angle		Shift + TV/R
	Zoom		Eject
	VFP		Shift + Subt
	DVD Level		List
	Progressive		Format
	Page+		Shift + Ch +
	Page-		Shift + Ch -
	3D Phonic		3D

