 


 

 
 
 

 

 
 
 
 




 
 
 

 





 

 




 
 

 
 
 


 
 
 
 

 

 

 

 
 
 





**Originalfernbedienung Ersatzfernbedienung**

	Audio Standby/On		Power
	1 / Center-		1
	2 / Center+		2
	3 / Subwoofer-		3
	4 / Subwoofer+		4
	5 / Rear-L-		5
	6 / Rear-L+		6
	7 / Rear-R-		7
	8 / Rear-R+		8
	9 / Test		9
	Clear		Exit
	0 / Setting		0
	0 / Setting		Options
	Sound		Dual
	DVD		Smart
	FM mode		TV/R
	FM/AM		Media

**Originalfernbedienung Ersatzfernbedienung**

	AUX		AV
	RDS		Ch +
	Search		Shift + TV/R
	Muting		Mute
	Rec / Memory		Rec
	Audio Vol+		Vol +
	Audio Vol-		Vol -
	Top Menu		D. Menu
	Menu		Menu
	Up / News/Info		Up
	Left / PTY-		Left
	Enter		Ok
	Right / PTY+		Right
	Down / PTY		Down
	Return		Back
	On Screen		Info
	Stop		Stop





**Originalfernbedienung Ersatzfernbedienung**






 


 
 



 
 

 


	Play		Play
	Pause		Pause
	I<< / Tuning		I<<
	>>I / Tuning Up		>>I
	<< / Slow-		<<
	>> / Slow+		>>
	Audio	+	Shift + Dual
	Angle		Format
	Sub Title		Subt
	Zoom		Eject
	Choice		Ch -
	Dimmer / Sleep		Sleep
	DSP		Green
	Surround		List

**Originalfernbedienung Ersatzfernbedienung**



 





 

 











**Originalfernbedienung Ersatzfernbedienung**


 
 

 

 



 
 

 

 
 


 


On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Stop		Stop
Pause		Pause
Subt.		Subt
Auto/Track		Sleep
Rep/A-B	 + 	Shift + Text
Title		List
Repeat/1/All		Text
Zoom	 + 	Shift + Eject
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung Ersatzfernbedienung**


OK Enter		Ok
Menu Right		Right
Return		Exit
Menu Down		Down
Progr.		Back
Volume+		Vol +
Next		>>
Volume-		Vol -
Top Menu		D. Menu
1		1
Prev.		<<
2		2
3		3
4		4
5		5
6		6
7		7




**Originalfernbedienung Ersatzfernbedienung**

8		8
9		9
+10		Guide
0		0
C/CH		Pre Ch
ON/Off	 + 	Shift + Power
Record		Rec
Open/Close		Eject
F.Forward		>>
Rewind		<<
Play		Play
Info	 + 	Shift + Info
Video		Smart
Karaoke/Step	 + 	Shift + Pause
Mode		Media
Auto Scan	 + 	Shift + Ok
Vocal/Assist	 + 	Shift + Vol +

**Originalfernbedienung Ersatzfernbedienung**

Echo+	 + 	Shift + Ch +
Tone	 + 	Shift + Vol -
Audio		Dual
Echo-	 + 	Shift + Ch -
Angle		Format

