



Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Open / Close		Eject
	Play Mode		Shift + Play
	Cancel		Exit
	3D Phonic		3D
	Return		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide

Originalfernbedienung Ersatzfernbedienung

	+10		Pre Ch
	Angle		Format
	Sub Title		Subt
	Audio		Dual
	Zoom		Shift + Eject
	Theater Position		Smart
	Digest		Media
	I<< Previous		I<<
	Stop / Clear		Shift + Menu
	Next >>I		>>I
	Stop / Clear		Stop
	Play / Select		Play
	Pause / Strobe		Pause
	<< / Slow-		<<
	>> / Slow+		>>
	Title		Text
	Menu		Menu



