
 





 

 

 




 

 


 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	2		2
	1		1
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text



 

Originalfernbedienung Ersatzfernbedienung

	(i)		Info
	TV		TV/R
	OK/Menu		Menu
	Up/P+		Up
	Down/P-		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Up/[+]		Ch +
	Down		Ch -
	<</F.T/L		<<
	Play/[?]		Play
	>>/[♦]		>>
	Rec		Rec
	Stop/[X]		Stop
	Power/[≡i]		Shift + Power





Originalfernbedienung Ersatzfernbedienung









 
 




 


	>		>>
	<		<<

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up/[+]		Ch +
	Down		Down
	<</F.T/L		<<
	Play/[?]		Play
	Stop/[X]		Stop
	>>/[◇]		>>
	>		Right
	<		Left

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up/[+]		Ch +
	Down		Down
	<</F.T/L		<<
	Play/[?]		Play
	Stop/[X]		Stop
	>>/[♦]		>>
	>		Right
	<		Left
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

