



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Dimmer		Media
	Display		Info
	FM Mode		TV/R
	MD/AUX		Red
	AHB PRO		Smart
	Auto Preset		3D
	Open/Close CD		Eject
	Program		Shift + Sleep
	Random		Subt
	Repeat		Text
	Bass		Green
	Treble		Yellow
	Cancel		Back
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Set		Ok
	PTY EON		AV
	<> Tape		Pause
	Display Mode		Shift + Info
	Tuner/Band		Dual
	Play/Pause CD		Play
	>>I		>>I
	Stop		Stop
	I<<		I<<
	Volume+		Vol +
	Volume-		Vol -

