



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide / EPG / -/--
	Clock/Timer		Shift + Sleep / Timer
	Set/Resume		Menu / Home
	Cancel		Exit / Cancel / Clear
	Display		Display / Media
	MP3 Mode		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Preset Up		>> / Preset+
	Preset Down		<< / Preset-
	>>/>>		>> / Tune+
	<</<<		<< / Tune-
	Stop		Stop / Hold
	Play/Pause CD		Play / Slow
	FM/AM		Fav / Marker / PC
	Play/Pause USB Memory		Pause / Step / Freeze
	AUX		AV / Input / RDS
	TA/News/Info		Info / Angle
	Display Mode		Setup / OPT /
	PTY Search		Red / Netflix / Search
	PTY+		CH+ / Page+
	PTY-		CH- / Page-
	QP Link		Smart / List
	FM Mode		TV/Radio /
	Repeat		Green / APP / Repeat



