




Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Dimmer		Mute / Dimmer
	Power		Power
	Active Bass EX.		Subtitle / EQ
	Clock/Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	Bass		Sound / Title
	Treble		Audio / Lang I/II
	FM Mode		CH+ / Page+
	Play Mode		Menu / Home
	Repeat		Green / APP / Repeat
	Auto Preset		CH- / Page-
	PTY/EON		Back / Return
	Title/Edit		Info / Angle
	Enter		Smart / List
	Display/Chara.		Display / Media
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit / Cancel / Clear
	Left		Left
	Set		OK
	Right		Right
	Play/Pause MD		Pause / Step / Freeze
	Down		Down
	AUX		7
	<> Tape		>> / Tune+
	FM/AM		6
	Play/Pause CD		Play / Slow
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Volume+		Vol+
	Volume-		Vol-

