



Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Standby Tv	+	Shift + Power
	Standby		Power
	1 Tv	+ 1	Shift + 1
	2 Tv	+ 2	Shift + 2
	2	2	2
	3 Tv	+ 3	Shift + 3
	1	1	1
	4 Tv	+ 4	Shift + 4
	3	3	3
	4	4	4
	5 Tv	+ 5	Shift + 5
	5	5	5
	6 Tv	+ 6	Shift + 6
	7 Tv	+ 7	Shift + 7
	6	6	6
	8 Tv	+ 8	Shift + 8

 

 

 

 

 

 

 





 



 



 

 

 

 

Originalfernbedienung Ersatzfernbedienung

	7	7	7
	9 Tv	+ 9	Shift + 9
	8	8	8
	9	9	9
	0 Tv	+ 0	Shift + 0
	0	0	0
	-/-- Tv		Guide / EPG / -/--
	10	+	Shift + Guide / EPG / -/--
	+10		Fav / Marker / PC
	Return		Back / Return
	Page		Setup / OPT /
	Title/Group		Info / Angle
	Tv/Video	+	Shift + TV/Radio / Program
	Cancel		Exit / Cancel / Clear
	Top Menu		D.Menu / Top
	Choice		TV/Radio /
	Menu		Menu / Home

 
 
 
 
 





 


















Originalfernbedienung Ersatzfernbedienung

	CH+ Tv		Shift + CH+ /
	Up		Up
	CH- Tv		Shift + CH- /
	Vol- Tv		Shift + Vol-
	Down		Down
	Vol+ Tv		Shift + Vol+
	Right		Right
	Enter		OK
	Left		Left
	I<</Previous		I<< / Preset-
	On Screen		Display / Media
	>>I/Next		>>I / Preset+
	Stop/Clear		Stop / Hold
	Play/Select		Play / Slow
	Pause/Strobe		Pause / Step / Freeze
	<</Slow-		<< / Tune-
	>>/Slow+		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	Subtitle		Subtitle / EQ
	Audio/fs/Rate		Audio / Lang I/II
	VFP/Progressive Scan		Picture / Format
	Digest		AV / Input / RDS
	Angle		Shift + Info / Angle
	Zoom-		CH- / Page-
	Zoom+		CH+ / Page+
	3D Phonic		Zoom / Size
	PAL/NTSC		Sleep / Timer
	Amp Vol-		Vol-
	Amp Vol+		Vol+
	Muting Tv		Mute / Dimmer

