 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	Clock/Timer		Shift + Sleep / Timer
	Display Down		Smart / List
	Sleep		Sleep / Timer
	Bass		CH- / Page-
	Treble		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Set		Menu / Home
	Cancel		Exit / Cancel / Clear
	Up		Up
	Down		Down
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	>>I		Right
	I<<		Left
	Stop		Stop / Hold
	Stop		OK
	Play CD		Play / Slow
	Pause CD		Pause / Step / Freeze
	Tape <>		Shift + 5
	FM/AM		Green / APP / Repeat
	AUX/MD		Yellow / YouTube / Repeat
	Eject CD		Eject / Surround
	Rev Mode		Audio / Lang I/II



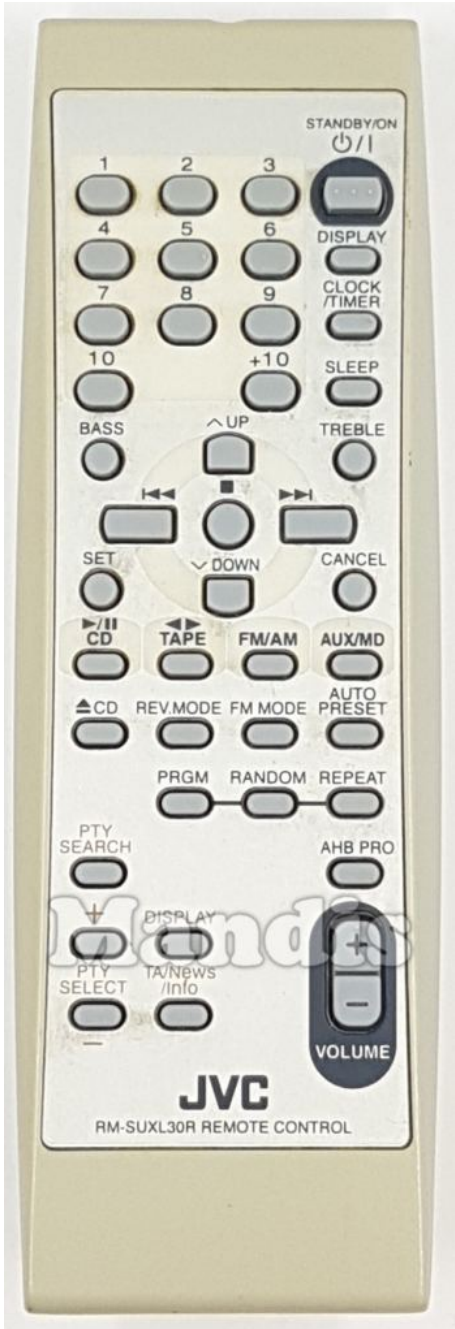

**Originalfernbedienung Ersatzfernbedienung**

FM MODE	FM Mode	PROGRAM TV/RADIO	TV/Radio /
AUTO PRESET	Auto Preset	RDS AV INPUT	AV / Input / RDS
PRGM	PRGM	EQ SUBTITLE	Subtitle / EQ
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
REPEAT	Repeat	RETURN BACK	Back / Return
PTY SEARCH	PTY Search	SIZE ZOOM	Zoom / Size
AHB PRO	AHB Pro	FORMAT PICTURE	Picture / Format
+	PTY Select+	TUNE+	>> / Tune+
-	PTY Select-	TUNE-	<< / Tune-
DISPLAY	Display	MEDIA DISPLAY	Display / Media
TA/News/Info	TA/News/Info	ANGLE INFO	Info / Angle
+	Vol+	+ VOL	Vol+
-	Vol-	- VOL	Vol-

**Originalfernbedienung Ersatzfernbedienung**