






Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject / Surround
	Display		Display / Media
	Up		Up
	DVD Menu		D.Menu / Top
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Pause/Step		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	1		1
	2		2
	3		3
	Program		TV/Radio /
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	0		0
	O))/Audio		Audio / Lang I/II
	[...]/Subtitle		Subtitle / EQ
	Camera/Angle		Info / Angle
	Zoom		Zoom / Size





Originalfernbedienung Ersatzfernbedienung

MARKER	Marker	PC FAV MARKER	Fav / Marker / PC
SEARCH	Search	NETFLIX SEARCH	Red / Netflix / Search
TITLE	Title	TITLE SOUND	Sound / Title
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

