




















































 




 



 









Originalfernbedienung Ersatzfernbedienung

	1		1
	1 CD		Shift + 1
	2		2
	2 CD		Shift + 2
	3		3
	3 CD		Shift + 3
	Tuner		Red / Netflix / Search
	4		4
	4 CD		Shift + 4
	5		5
	5 CD		Shift + 5
	6		6
	6 CD		Shift + 6
	Phono		Green / APP / Repeat
	7		7
	7 CD		Shift + 7
	8		8



Originalfernbedienung Ersatzfernbedienung

	8 CD		Shift + 8
	9		9
	9 CD		Shift + 9
	Tape		Yellow / YouTube / Repeat
	10		0
	10 CD		Shift + 0
	+10		Guide / EPG / -/--
	+10 CD		Shift + Guide / EPG / -/--
	Play CD		Play / Slow
	Stop CD		Stop / Hold
	Pause CD		Pause / Step / Freeze
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	<< CD		<< / Tune-
	>> CD		>> / Tune+
	Fade Muting		Mute / Dimmer
	Volume-		Vol-





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Volume+	 Vol+

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

