



 










 





 



 





 
 


 

 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	P.Mode / OK		Smart / List
	Index		Play / Slow
	P.Mode / OK		Picture / Format
	AV		AV / Input / RDS
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Menu		OK
	Left / Vol-		Vol-
	Left / Vol-		Left
	Hold		Stop / Hold
	Right / Vol+		Right
	Right / Vol+		Vol+
	Sub Page		Subtitle / EQ
	Down / P-		Down
	Down / P-		CH- / Page-
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Vol-		Left
	Vol+		Vol+
	Vol+		Right
	Up		Up
	Up		CH+ / Page+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Down		Down
	Down		CH- / Page-
	Stop		Stop / Hold
	Power DVD		Power

Originalfernbedienung Ersatzfernbedienung



