



Originalfernbedienung Ersatzfernbedienung

	Title Del	+ 1	Shift + 1
	Level Meter	+ 2	Shift + 2
	Motion Sensor	+ 3	Shift + 3
	Power Audio		Power
	Display Chara	+ 4	Shift + 4
	Eco Dimmer	+	Shift + Mute / Dimmer
	Tv/Video		TV/Radio /
	Power Tv	+	Shift + Power
	1	1	1
	2	2	2
	3	3	3
	MIC Vol+	+	Shift + Up
	TV Channel+	+	Shift + CH+ /
	4	4	4
	5	5	5
	6	6	6
	MIC Vol-	+	Shift + Down









 









Originalfernbedienung Ersatzfernbedienung

	TV Channel-	+ -	Shift + CH- /
	7	7	7
	8	8	8
	9	9	9
	Karaoke Setting		Smart / List
	10		Guide / EPG / -/-
	Sleep		Sleep / Timer
	0	0	0
	A.STBY	+ 0	Shift + 0
	+10		Fav / Marker / PC
	Clock/Timer	+	Shift + Sleep / Timer
	Mic Mix	+	Shift + Smart / List
	Karaoke Scoring	+	Shift + AV / Input / RDS
	Reserve	+	Shift + Green / APP /
	Vocal Masking	+	Shift + Red / Netflix /
	Vocal Support	+	Shift + Subtitle / EQ
	Top Menu/PG		D.Menu / Top









 

 





 

 
 



 
 

 







Originalfernbedienung Ersatzfernbedienung

	Menu/PL		Menu / Home
	Cancel		Exit / Cancel / Clear
	Audio Vol+		Vol+
	Tv Vol+		Shift + Right
	Up		Up
	Left		Left
	Enter/Set		OK
	Right		Right
	Down		Down
	Audio Vol-		Vol-
	Tv Vol-		Shift + Left
	On Screen		Display / Media
	Set Up		Setup / OPT /
	Fade Muting		Mute / Dimmer
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Back/Tuner/Play Mode		Back / Return
	Return		Shift + Back / Return
	I<<		I<< / Preset-
	I<< Group Title Skip		Shift + I<< / Preset-
	>>I		>>I / Preset+
	Group Title Skip >>I		Shift + >>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Group Title >>		Shift + >> /
	Play/Pause		Red / Netflix / Search
	Play/Pause USB		Shift + Play /
	FM Tuner		Shift + 6
	Tuner AM		Blue / Prime Video / Random
	Audio/MPX		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Angle		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	Audio In	+	Shift + Display / Media
	File Type		Text / Goto
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	VFP/Scan Mode		AV / Input / RDS
	3D Phonic/HP	+	Shift + Zoom /
	C.Voice	+	Shift + Setup / OPT / Tools
	DVD Audio In	+	Shift + Audio / Lang I/II
	Sound Mode		Sound / Title
	Subwoofer Level+		CH+ / Page+
	My Sound		Picture / Format
	V.Bass	+	Shift + Sound / Title
	Subwoofer Level-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

