



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Menu		Menu
	VOD		Smart
	TV		TV/R
	Info		Info
	Ajustes		Options
	Volver		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	<<		<<

