



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Search		TV/R
	Display		Shift + Info
	Subtitle		Subt
	Vol +		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol -		Vol -
	Setup		Options
	Title		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	PBC		Smart
	Menu		Menu
	Audio		Dual
	Zoom		Eject
	USB / Card		Media
	Step II >		Shift + Pause
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	I<< Prev		I<<
	Next >>I		>>I
	<< Rev		<<
	Fwd >>		>>
	L / R		Ch +
	N / P		Ch -
	Mute		Mute
	Program		Sleep
	Clear		Shift + Exit
	Repeat		Text
	A-B		Shift + Text
	V-Mode		Format
	TV-Mode		AV
	Slow		Red
	Return		Back

Originalfernbedienung Ersatzfernbedienung

