 


 






 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Power |  | Power |
|  | Repeat |  | Text |
|  | A-B |  | Shift + Text |
|  | Open / Close |  | Eject |
|  | N / P |  | TV/R |
|  | Subtitle |  | Subt |
|  | Angle |  | Format |
|  | Language |  | Dual |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|---------------|
|  | 0 |  | 0 |
|  | 10+ |  | Guide |
|  | Time |  | AV |
|  | Setup |  | Options |
|  | Title |  | Media |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | PBC |  | Smart |
|  | Menu |  | Menu |
|  | Vol - |  | Vol - |
|  | Vol + |  | Vol + |
|  | Zoom |  | Shift + Eject |
|  | Return |  | Back |
|  | L / R |  | Shift + Dual |



