 





 

 
 



 

 



 











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|------------------|
|  | Standby |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | TV / STB |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | TV / Radio |  | TV/Radio / |
|  | CH + |  | CH+ / Page+ |
|  | Mute |  | Mute / Dimmer |
|  | Vol + |  | Vol+ |
|  | CH - |  | CH- / Page- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | Pause |  | Pause / Step / Freeze |
|  | Vol - |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Menu |  | Menu / Home |
|  | Red / SUB-T |  | Subtitle / EQ |
|  | Red / SUB-T |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow / Timer |  | Yellow / YouTube / Repeat |
|  | Blue / Info |  | Blue / Prime Video / Random |
|  | Blue / Info |  | Info / Angle |
|  | P.STD |  | Picture / Format |
|  | P.Size |  | Zoom / Size |



