 







 

 

 



 

 




 

 



 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / STB		AV / Input / RDS
	0		0
	TV / Radio		TV/Radio /
	CH +		CH+ / Page+
	Mute		Mute / Dimmer
	Vol +		Vol+
	CH -		CH- / Page-

 

 





 



 

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Vol -		Vol-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Red / SUB-T		Subtitle / EQ
	Red / SUB-T		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Timer		Yellow / YouTube / Repeat
	Blue / Info		Blue / Prime Video / Random
	Blue / Info		Info / Angle
	P.STD		Picture / Format
	P.Size		Zoom / Size





Originalfernbedienung Ersatzfernbedienung

	A L/R		Sound / Title
	Text		Text / Goto
	Recall		Back / Return
	Recall		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	A.Lang		Audio / Lang I/II
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

