

 




















 

 













 







**Originalfernbedienung    Ersatzfernbedienung**

	TV		TV/Radio /
	TV	 + 	Shift + 1
	Audio		Audio / Lang I/II
	TV / VCR		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	Text		Text / Goto
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Sound		Sound / Title

**Originalfernbedienung    Ersatzfernbedienung**

	Alt		Fav / Marker / PC
	0		0
	i		Info / Angle
	Setup		Setup / OPT /
	Exit		Exit / Cancel / Clear
	Up		Up
	Navigator		Smart / List
	Left		Left
	OK		OK
	Right		Right
	Vol +		Vol+
	Down		Down
	CH +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer
	Recall		Back / Return
	CH -		CH- / Page-





**Originalfernbedienung**   **Ersatzfernbedienung**

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	Check		Display / Media

**Originalfernbedienung**   **Ersatzfernbedienung**