 
 


 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------------------|
|  | Power |  | Power |
|  | Source |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | [TV] |  | TV/Radio / |
|  | Internet |  | Smart / List |
|  | ↔ |  | Fav / Marker / PC |
|  | Mute |  | Mute / Dimmer |
|  | Vol+ |  | Vol+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------|
|  | Vol- |  | Vol- |
|  | P+ |  | CH+ / Page+ |
|  | P- |  | CH- / Page- |
|  | OK |  | OK |
|  | Menu |  | Menu / Home |
|  | Back |  | Back / Return |
|  | Exit |  | Exit / Cancel / Clear |
|  | Q.Menu |  | D.Menu / Top |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | i |  | Info / Angle |
|  | EPG |  | Guide / EPG / -/- |
|  | TXT |  | Text / Goto |
|  | Lang. |  | Audio / Lang I/II |
|  | Subt. |  | Subtitle / EQ |



