







 

 

 





 









 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	On Screen		Display / Media
	Zoom		Zoom / Size
	Pause		Pause / Step / Freeze
	I>/Slow		AV / Input / RDS
	Stop		Stop / Hold
	I<<		<< / Tune-
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	>>I		>> / Tune+
	1		1
	2		2
	3		3
	P.Mode		Picture / Format
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	0		0
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /





Originalfernbedienung Ersatzfernbedienung

REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
MARKER	Marker	PC FAV MARKER	Fav / Marker / PC
-SEARCH	Search	NETFLIX SEARCH	Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

