




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Mute		Mute
	A1		Red
	A2		Green
	A3		Yellow
	A4		Blue
	Retrun/Exit		Exit
	Menu		Menu
	Sound		Dual
	Format		Format
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Picture		Shift + Format






 





 
Originalfernbedienung Ersatzfernbedienung

	Freeze		Pause
	D1		Options
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	D3		TV/R
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	Display		Info
	Previous Channel		Back
	E1		Media
	E2		Text
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

