


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	PBC		Green
	Display		Info
	Eject		Eject
	Subtitle		Subt
	Search	 + 	Shift + TV/R
	Angle		Red
	Language		Dual
	Setup		Options
	Title		Back
	Menu		Menu
	Zoom	 + 	Shift + Eject
	Resume		TV/R
	Pause		Pause
	Slow		Exit
	Stop		Stop
	Up		Up

**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Right		Right
	Left		Left
	Play		Play
	I<<		I<<
	I>>		I>>
	<<		<<
	>>		>>
	All		Text
	A-B	 + 	Shift + Play
	Vol-		Vol -
	Vol+		Vol +
	Mute		Mute
	+10		Guide
	1		1
	2		2
	3		3




**Originalfernbedienung   Ersatzfernbedienung**

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P.Scan		Media
	Program		Sleep

**Originalfernbedienung   Ersatzfernbedienung**


