


 


 
 
 
 
 




 
 

 

 

 





 

 
 



 
 


 

 
 


 
 
 
 
 
 
 
 

 
 
 



 

 
 







Originalfernbedienung Ersatzfernbedienung



 
 
	Power		Power
	My Apps		Media
	TV/Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Format
	Input		AV
	Q.Menu/Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Info		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Page+		Ch +
	Page-		Ch -
	Text		Text
	T.Opt		Options
	Smart		Smart
	FAV		Pre Ch
	Back		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop/Line TV		Stop
	Rec/*		Rec
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	APP/*	 + 	Shift + Media
	AD	 + 	Shift + Subt
	Settings	 + 	Shift + Options

