
 



 

 







 

 



 

 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Power Tv		Shift + Power
	DVD		Shift + 2
	HDD		Shift + 7
	AV		AV / Input / RDS
	Av Tv		Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR- Tv		CH- / Page-
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Vol+ Tv		Vol+
	Tv/DVD		Smart / List
	0		0
	Mute Tv		Mute / Dimmer
	Vol- Tv		Vol-
	Display		Display / Media
	Text		Text / Goto
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	Zoom		Zoom / Size
	Repeat		Shift + Green / APP /
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze



