






 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Mute		Mute / Dimmer
	Exit		Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Shift + Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Repeat/Tv/Radi		TV/Radio /
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause/Time Shift		Pause / Step / Freeze
	Vol+		Vol+
	Vol-		Vol-
	Rec		Rec / Rec Mode
	CH+		CH+ / Page+
	CH-		CH- / Page-
	CH List		Smart / List
	Timer Rec		Sleep / Timer
	Home		Menu / Home
	Guide Music ID		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

	Info/Menu		Info / Angle
	Left		Left
	Up		Up
	Right		Right
	Enter		OK
	Down		Down
	Back		Back / Return
	Title/Popup		Picture / Format
	Disc Menu/Rec		D.Menu / Top
	Red/R		Red / Netflix / Search
	Green/G		Green / APP / Repeat
	Yellow/Y		Yellow / YouTube / Repeat
	Blue/B		Blue / Prime Video / Random
	Power Tv		Shift + Power
	Vol+ Tv		Shift + Vol+
	PR/CH+ Tv		Shift + CH+ /
	AV/Input Tv		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Vol- Tv		Shift + Vol-
	PR/CH- TV		Shift + CH- /

