 

 

 


 



 








 

 
 
 
 
 
 
 

 
 
 



 
 
 
 


 


 
 


 
 
 
 
 
 
 
 
 
 
 


 

 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/close		Eject
	Time Shift		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Shift + Text
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	<<		<<
	>>		>>
	Pr+		Ch +
	Pr-		Ch -
	Rec		Rec
	Guide		Guide
	Pr List		TV/R
	Timer Rec		Shift + Options
	Info/Display		List
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Return		Back
	Title/Popup		Options



