 



 


 
 

 

 

 

 
 
 
 


 

 





 





Originalfernbedienung Ersatzfernbedienung





 
 
 
 
 









 

 
	OK		Ok
	Power		Power
	Back		Back
	Home/Smart		Media
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	3D		3D
	Mute		Mute
	Ch+		Ch +
	Ch-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Wheel Up		2
	Wheel Down		8

Originalfernbedienung Ersatzfernbedienung












 



 

 
 



 


Originalfernbedienung	Ersatzfernbedienung
Power	 Power
Wheel Down	 +  Shift + Down
OK	 Ok
Up	 Up
Down	 Down
Wheel Up	 +  Shift + Up
Right	 Right
Left	 Left
Back	 Back
Home / Smart	 Smart
3D	 3D
123 / Q.Menu	 +  Shift + Ok
Vol +	 Vol +
Vol -	 Vol -
Mute	 Mute
P +	 Ch +
P -	 Ch -

Originalfernbedienung	Ersatzfernbedienung
Ratio	 Format
List	 List
Q.Menu	 +  Shift + Menu
Subtitle	 Subt
Settings	 +  Shift + Options
AD / PIP	 Dual
>>	 >>
>>>	 >>I
Play	 Play
<<<	 <<<
<<	 I<<<
Rec	 Rec
Pause	 Pause
Stop / Live TV	 Stop
AV Mode	 +  Shift + AV
Text	 Text
FAV	 +  Shift + Pre Ch

 
 
 


 




 




Originalfernbedienung **Ersatzfernbedienung**

Exit		Exit
TV / PC	 + 	Shift + Smart
Input		AV
TV / Radio		TV/R
Blue		Blue
Yellow		Yellow
Green		Green
Red		Red
0		0
AD	 + 	Shift + Subt
Search	 + 	Shift + TV/R
Live Menu		Menu
Recent		Pre Ch
Live Zoom		Eject
App	 + 	Shift + Media
Guide		Guide
Info		Info

Originalfernbedienung **Ersatzfernbedienung**

T.Opt		Options
Q.View		D. Menu
Energy Saving	 + 	Shift + 3D
9		9
8		8
7		7
6		6
5		5
4		4
3		3
2		2
1		1
My APPS		Media

