




 




 
 


 
 


 


 


 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Back		Back
	Home/Smart		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	3D		3D
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Pr+		Ch +
	Pr-		Ch -
	Wheel Up		2
	Wheel Down		5

Originalfernbedienung	Ersatzfernbedienung







 

 

 

 

 
 

 

 




 
 

 
 
 

 





 
Originalfernbedienung	Ersatzfernbedienung
Power	 Power
Wheel Down	 +  Shift + Down
OK	 Ok
Up	 Up
Down	 Down
Wheel Up	 +  Shift + Up
Right	 Right
Left	 Left
Back	 Back
Home / Smart	 Smart
3D	 3D
123 / Q.Menu	 +  Shift + Ok
Vol +	 Vol +
Vol -	 Vol -
Mute	 Mute
P +	 Ch +
P -	 Ch -

Originalfernbedienung	Ersatzfernbedienung
Ratio	 Format
List	 List
Q.Menu	 +  Shift + Menu
Subtitle	 Subt
Settings	 +  Shift + Options
AD / PIP	 Dual
>>	 >>
>>>	 >>I
Play	 Play
<<<	 <<<
<<	 I<<<
Rec	 Rec
Pause	 Pause
Stop / Live TV	 Stop
AV Mode	 +  Shift + AV
Text	 Text
FAV	 +  Shift + Pre Ch





Originalfernbedienung	Ersatzfernbedienung
Exit	 Exit
TV / PC	 +  Shift + Smart
Input	 AV
TV / Radio	 TV/R
Blue	 Blue
Yellow	 Yellow
Green	 Green
Red	 Red
0	 0
AD	 +  Shift + Subt
Search	 +  Shift + TV/R
Live Menu	 Menu
Recent	 Pre Ch
Live Zoom	 Eject
App	 +  Shift + Media
Guide	 Guide
Info	 Info

Originalfernbedienung	Ersatzfernbedienung
T.Opt	 Options
Q.View	 D. Menu
Energy Saving	 +  Shift + 3D
9	 9
8	 8
7	 7
6	 6
5	 5
4	 4
3	 3
2	 2
1	 1
My APPS	 Media

