




 





 
 



 

 


 

 



 








 








 

 

 

 








 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	List		List
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Mute/SAP		Mute
	Home		Smart
	*/Setting		Menu
	3D		3D
	Exit		Exit
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Wheel Up		>>
	Weel Down		<<
	OK		Ok
	[!!!]		Options
	Red		Red
	Green		Green



