
 
 
 
 
 







 
 







 





 

 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------|
|  | Standby |  | Power |
|  | STB PWR |  | Shift + Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0/Quick Access |  | 0 |
|  | List |  | List |
|  | AD |  | Subt |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | P+ |  | Ch + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | P- |  | Ch - |
|  | Mute |  | Mute |
|  | Micro/Q |  | Format |
|  | Home/Recents |  | TV/R |
|  | * |  | Menu |
|  | Back/Exit |  | Back |
|  | Guide |  | Guide |
|  | Mouse Up |  | >> |
|  | Mouse Down |  | << |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Netflix |  | Shift + Media |
|  | Amazon |  | Media |
|  | Source |  | AV |



