 



 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 

 
 


 

 
 


 

 

 



 
 


 
 
 
 
 
 
 





 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Text
	Play		Play
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Disc Menu		D. Menu
	Info/Menu		Info
	Back		Back
	Home		Smart
	Title/Popup		Options
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
B	Blue	D	Blue
	Power Tv	SHIFT +	Shift + Power
INPUT	Input Tv	TIMER AV	AV
VOL-	Vol-	VOL-	Vol -
VOL+	Vol+	+ VOL	Vol +

