







 







 

 

 
 


 















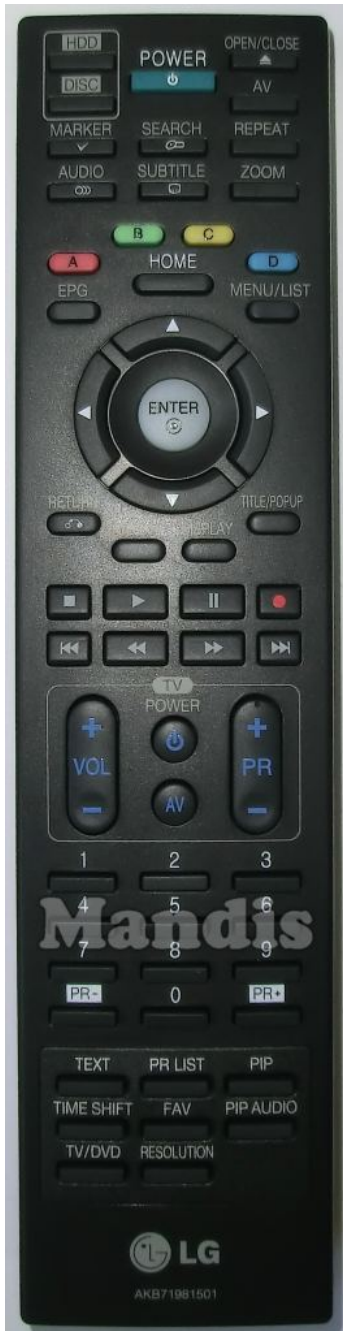 
**Originalfernbedienung   Ersatzfernbedienung**





 
 

 


 
 
 

 
 

 

 


 
 

 
 
 
	Power		Power
	Play		Play
	Pause		Pause
	HDD		Media
	Disc		Smart
	Open/Close		Eject
	AV		AV
	Zoom		Shift + Eject
	Repeat		Shift + Text
	[...]/Subtitle		Subt
	Search		Shift + TV/R
	O)))/Audio		Dual
	Marker		Shift + Media
	EPG		Guide
	FAV		Pre Ch
	Menu/List		Menu
	Home		Shift + Smart

**Originalfernbedienung   Ersatzfernbedienung**

	PR List		Shift + Guide
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Return		Back
	Clear		Exit
	Title/Pop Up		Info
	Display		Shift + Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop		Stop
	Rec		Rec
	>>		>>




**Originalfernbedienung   Ersatzfernbedienung**

	<<		<<
	>>		>>
	I<<		I<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PR-		Ch -
	PR+		Ch +
	Text		Text
	PIP		Format

**Originalfernbedienung   Ersatzfernbedienung**

	PIP Audio		List
	Tv/DVD		TV/R
	Time Shift		Options
	Resolution		Mute
	Power Tv		Shift + Power
	AV Tv		D. Menu
	PR+ Tv		Shift + Ch +
	PR- Tv		Shift + Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

