



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Dolby DRC On		Smart
	Dolby DRC Off		Media
	Vol+		Vol +
	Vol-		Vol -
	AV Sync+		Right
	AV Sync-		Left
	Mute		Mute
	PR/CH+ Tv		Ch +
	PR/CH- Tv		Ch -
	Input Tv		AV
	Mute Tv		Shift + Mute
	Vol+ Tv		Shift + Vol +
	Vol- Tv		Shift + Vol -
	Power Tv		Shift + Power
	Auto Power On		Up
	Auto Power Off		Down

