 

 





 









 





 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Input Function		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Repeat		Shift + Green / APP /
	I<< Skip		I<< / Preset-
	<< Scan		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	>> Scan		>> / Tune+
	>>I Skip		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Speaker Level		Setup / OPT /
	Vol+		Vol+
	Optical/Tv Sound		Smart / List
	Sound Effect		Shift + Sound / Title
	Vol-		Vol-
	Mute		Mute / Dimmer
	Home		Menu / Home
	3D Sound		Shift + 3
	Info/Menu		Shift + Menu /
	Info/Menu		Info / Angle
	Left/Tuning-		Left
	Left/Tuning-		Shift + << / Tune-





Originalfernbedienung Ersatzfernbedienung

	Up/Presets+		Up	
	Up/Presets+		+	Shift + >>  / Presets+
	Enter		OK	
	Right/Tuning+		Right	
	Right/Tuning+		+	Shift + >> /
	Down/Presets-		Down	
	Down/Presets-		+	Shift +  << / Presets-
	Back		Back / Return	
	Title/Pop Up		Sound / Title	
	Disc Menu		D.Menu / Top	
	Red/RDS		Red / Netflix / Search	
	Red/RDS		+	Shift + AV / Input / RDS
	Green/PTY		Green / APP / Repeat	
	Yellow/PTY Search		Yellow / YouTube / Repeat	
	Blue/Mono/Stereo		Blue / Prime Video / Random	
	Subtitle		Subtitle / EQ	
	Audio		Audio / Lang I/II	

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer	
	Music ID		Text / Goto	
	Power TV		+	Shift + Power
	Vol+ Tv		+	Shift + Vol+
	CH+ Tv		CH+ / Page+	
	AV Input Tv		AV / Input / RDS	
	Vol- Tv		+	Shift + Vol-
	CH- Tv		CH- / Page-	

