 



 

 





 

 
 
 
 
 
 


 
 
 


 
 
 
 
 
 
 
 

 


 

 
 


 



 

 
 
 
 





 

 
 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV
	Guide		Guide
	Q.Menu/Subtitle		Menu
	AD		Subt
	Q.View		D. Menu
	List		List

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Mute		Mute
	FAV		Pre Ch
	Smart		Smart
	Settings		Options
	Text		Text
	T.Opt		Shift + Options
	Exit		Exit
	Back		Back
	My APPS		Media
	Vol+		Vol +
	Vol-		Vol -
	Page+		Ch +
	Page-		Ch -
	OK		Ok
	Up		Up
	Down		Down



