 
 
 
 
 

 

 
 
 

 


 
 
 
 
 




 




 
 
 
 

 





**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	Home		Smart
	Back		Back
	Micro		Dual
	Tv		TV/R
	Mouse Down		>>
	Mouse Up		<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +







 
 






 
 




**Originalfernbedienung   Ersatzfernbedienung**

	Vol-		Vol -
	123/Input		AV
	3D		3D
	Mute/AD		Mute
	P+		Ch +
	P-		Ch -

 
 
 
 

 
 

 





 

 

 


 

 

 

 
 

 

 
 


 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Wheel Down	 + 	Shift + Down
	OK		Ok
	Up		Up
	Down		Down
	Wheel Up	 + 	Shift + Up
	Right		Right
	Left		Left
	Back		Back
	Home / Smart		Smart
	3D		3D
	123 / Q.Menu	 + 	Shift + Ok
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	P +		Ch +
	P -		Ch -











 

 
 

 

 


 




**Originalfernbedienung Ersatzfernbedienung**

	Ratio		Format
	List		List
	Q.Menu	 + 	Shift + Menu
	Subtitle		Subt
	Settings	 + 	Shift + Options
	AD / PIP		Dual
	>>		>>
	>>		>>
	Play		Play
	<<		<<
	<<		<<
	Rec		Rec
	Pause		Pause
	Stop / Live TV		Stop
	AV Mode	 + 	Shift + AV
	Text		Text
	FAV	 + 	Shift + Pre Ch

 

 
 


 


 
 
 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

Exit		Exit
TV / PC	 + 	Shift + Smart
Input		AV
TV / Radio		TV/R
		Blue
		Yellow
		Green
		Red
0		0
AD	 + 	Shift + Subt
Search	 + 	Shift + TV/R
Live Menu		Menu
Recent		Pre Ch
Live Zoom		Eject
App	 + 	Shift + Media
Guide		Guide
Info		Info

**Originalfernbedienung    Ersatzfernbedienung**

T.Opt		Options
Q.View		D. Menu
Energy Saving	 + 	Shift + 3D
9		9
8		8
7		7
6		6
5		5
4		4
3		3
2		2
1		1
My APPS		Media

