 

 
 




 

 
 
 



 

 

 





 





 

 

 

 


 


 



 

 



 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Text
	HDD		D. Menu
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input		AV
	Rec		Rec
	<< Scan		<<

Originalfernbedienung Ersatzfernbedienung

	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Menu/List		Menu
	Home		Smart
	Return		Back
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR+		Ch +
	PR-		Ch -



