



 




 
 
 
 




 
 









 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV/Input		AV
	Open/Close		Eject
	DVD		Sleep
	HDD		D. Menu
	O)))/Audio		Dual
	Display		Info
	Menu/List		Menu
	Title		List
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR/CH+		Ch +
	PR/CH-		Ch -
	Home		Smart

 


 
 




 

 



 
 



Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Marker		3D
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause/Step		Pause
	I<< Skip		I<<
	Skip >>I		>>I
	<< Scan		<<
	Scan >>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	FAV		Pre Ch
	Repeat		Shift + Text
	Text		Text

 











Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	EPG		Guide
	Timeshift		Options
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Power Tv		Shift + Power
	PR/CH+ Tv		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	PR/CH- Tv		Shift + Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	AV/Input TV		Shift + AV

