 
 



 
 

 
 

 
 
 

 
 
 
 
 
 

 
 


 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung


 


 





 

 




 






 




 
 


	Power		Power
	Input D/A		Smart
	Tv/Radio		TV/R
	Input		AV
	Bright-		Shift + Left
	Bright+		Shift + Right
	Simplink		Media
	Text		Text
	Ratio		Format
	I-II		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop		Stop
	Play		Play
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung


 

	Rec		Rec
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Menu		Menu
	Back		Back
	Exit		Exit
	Info		Info
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	FAV		Pre Ch
	Vol+		Vol +




Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Options
	Update/[≡x]		Shift + Back

Originalfernbedienung Ersatzfernbedienung

	Index/[≡i]		Shift + Info
	Time/[≡o]		D. Menu
	Sleep		Sleep
	Hold/[≡+]		Eject
	Reveal/[≡?]		3D
	Subtitle		Subt

 
 

 

 

 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Menu		Menu
	Up		Up
	Down		Down
	OK		Ok
	Right		Right
	Left		Left
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Stop		Stop
	Play		Play
	Pause		Pause
	Rec		Rec
	<<		<<
	>>		>>
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0

