




































Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power		Power	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Back		Back / Return	
Vol +		Vol+	
Vol -		Vol-	
Home / Smart		Menu / Home	
3D	 +  Shift + 3		
Mute		Mute / Dimmer	
P +		CH+ / Page+	
P -		CH- / Page-	
Ratio		Picture / Format	
List		Smart / List	
Q.Menu		D.Menu / Top	
Subtitle		Subtitle / EQ	
Settings		Setup / OPT /	
>>		>>I / Preset+	
>>		>> / Tune+	
Play		Play / Slow	
AD / PIP		Sound / Title	
<<		I<< / Preset-	
<<		<< / Tune-	
Rec		Rec / Rec Mode	
Pause		Pause / Step / Freeze	
Text		Text / Goto	
FAV		Fav / Marker / PC	
Exit		Exit / Cancel / Clear	
Input		AV / Input / RDS	
Blue		Blue / Prime Video / Random	
Yellow		Yellow / YouTube / Repeat	
Stop / Live TV		Stop / Hold	



