





 

 
 
 


















 

 
 





Originalfernbedienung Ersatzfernbedienung

AV Mode	 + 	Shift + AV / Input / RDS
Green		Green / APP / Repeat
Red		Red / Netflix / Search
0		0
AD		Audio / Lang I/II
TV / PC	 + 	Shift + Fav / Marker / PC
Search	 + 	Shift + Red / Netflix /
App	 + 	Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/--
Info		Info / Angle
Recent		Sleep / Timer
9		9
8		8
7		7
Live Menu		Display / Media
6		6

Originalfernbedienung Ersatzfernbedienung

5		5
Q.View	 + 	Shift + Display / Media
4		4
Live Zoom		Zoom / Size
3		3
2		2
1		1
T.Opt	 + 	Shift + Setup / OPT / Tools
Energy Saving		Eject / Surround
My APPS	 + 	Shift + Smart / List

