









































 



 



















 

 
 

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------------|---------------------|
| Power |  | Power | |
| OK |  | OK | |
| Up |  | Up | |
| Down |  | Down | |
| Right |  | Right | |
| Left |  | Left | |
| Back |  | Back / Return | |
| Vol + |  | Vol+ | |
| Vol - |  | Vol- | |
| Home / Smart |  | Menu / Home | |
| 3D |  +  Shift + 3 | | |
| Mute |  | Mute / Dimmer | |
| P + |  | CH+ / Page+ | |
| P - |  | CH- / Page- | |
| Ratio |  | Picture / Format | |
| List |  | Smart / List | |
| Q.Menu |  | D.Menu / Top | |
| Subtitle |  | Subtitle / EQ | |
| Settings |  | Setup / OPT / | |
| >> |  | >>I / Preset+ | |
| >> |  | >> / Tune+ | |
| Play |  | Play / Slow | |
| AD / PIP |  | Sound / Title | |
| << |  | I<< / Preset- | |
| << |  | << / Tune- | |
| Rec |  | Rec / Rec Mode | |
| Pause |  | Pause / Step / Freeze | |
| Text |  | Text / Goto | |
| FAV |  | Fav / Marker / PC | |
| Exit |  | Exit / Cancel / Clear | |
| Input |  | AV / Input / RDS | |
| Blue |  | Blue / Prime Video / Random | |
| Yellow |  | Yellow / YouTube / Repeat | |
| Stop / Live TV |  | Stop / Hold | |



Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|---------------------------|
| AV Mode |  +  | Shift + AV / Input / RDS |
| Green |  | Green / APP / Repeat |
| Red |  | Red / Netflix / Search |
| 0 |  | 0 |
| AD |  | Audio / Lang I/II |
| TV / PC |  +  | Shift + Fav / Marker / PC |
| Search |  +  | Shift + Red / Netflix / |
| App |  +  | Shift + Green / APP / |
| TV / Radio |  | TV/Radio / |
| Guide |  | Guide / EPG / -/-- |
| Info |  | Info / Angle |
| Recent |  | Sleep / Timer |
| 9 |  | 9 |
| 8 |  | 8 |
| 7 |  | 7 |
| Live Menu |  | Display / Media |
| 6 |  | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | |
|---------------|---|-----------------------------|
| 5 |  | 5 |
| Q.View |  +  | Shift + Display / Media |
| 4 |  | 4 |
| Live Zoom |  | Zoom / Size |
| 3 |  | 3 |
| 2 |  | 2 |
| 1 |  | 1 |
| T.Opt |  +  | Shift + Setup / OPT / Tools |
| Energy Saving |  | Eject / Surround |
| My APPS |  +  | Shift + Smart / List |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

