




































Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power		Power	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Back		Back / Return	
Vol +		Vol+	
Vol -		Vol-	
Home / Smart		Menu / Home	
3D	 +  Shift + 3		
Mute		Mute / Dimmer	
P +		CH+ / Page+	
P -		CH- / Page-	
Ratio		Picture / Format	
List		Smart / List	
Q.Menu		D.Menu / Top	
Subtitle		Subtitle / EQ	
Settings		Setup / OPT /	
>>		>>I / Preset+	
>>		>> / Tune+	
Play		Play / Slow	
AD / PIP		Sound / Title	
<<		I<< / Preset-	
<<		<< / Tune-	
Rec		Rec / Rec Mode	
Pause		Pause / Step / Freeze	
Text		Text / Goto	
FAV		Fav / Marker / PC	
Exit		Exit / Cancel / Clear	
Input		AV / Input / RDS	
Blue		Blue / Prime Video / Random	
Yellow		Yellow / YouTube / Repeat	
Stop / Live TV		Stop / Hold	



Originalfernbedienung Ersatzfernbedienung

AV Mode	+	Shift + AV / Input / RDS
Green		Green / APP / Repeat
Red		Red / Netflix / Search
0		0
AD		Audio / Lang I/II
TV / PC	+	Shift + Fav / Marker / PC
Search	+	Shift + Red / Netflix /
App	+	Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/--
Info		Info / Angle
Recent		Sleep / Timer
9		9
8		8
7		7
Live Menu		Display / Media
6		6

Originalfernbedienung Ersatzfernbedienung

5		5
Q.View	+	Shift + Display / Media
4		4
Live Zoom		Zoom / Size
3		3
2		2
1		1
T.Opt	+	Shift + Setup / OPT / Tools
Energy Saving		Eject / Surround
My APPS	+	Shift + Smart / List

