


































































Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power		Power	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Back		Back / Return	
Vol +		Vol+	
Vol -		Vol-	
Home / Smart		Menu / Home	
3D	 +  Shift + 3		
Mute		Mute / Dimmer	
P +		CH+ / Page+	
P -		CH- / Page-	
Ratio		Picture / Format	
List		Smart / List	
Q.Menu		D.Menu / Top	
		Subtitle	 Subtitle / EQ
		Settings	 Setup / OPT /
		>>	 >>I / Preset+
		>>	 >> / Tune+
		Play	 Play / Slow
		AD / PIP	 Sound / Title
		<<	 I<< / Preset-
		<<	 << / Tune-
		Rec	 Rec / Rec Mode
		Pause	 Pause / Step / Freeze
		Text	 Text / Goto
		FAV	 Fav / Marker / PC
		Exit	 Exit / Cancel / Clear
		Input	 AV / Input / RDS
		Blue	 Blue / Prime Video / Random
		Yellow	 Yellow / YouTube / Repeat
		Stop / Live TV	 Stop / Hold



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
AV Mode	 +  Shift + AV / Input / RDS	5	 5
Green	 REPEAT Green / APP / Repeat	Q.View	 +  Shift + Display / Media
Red	 Red / Netflix / Search	4	 4
0	 0	Live Zoom	 Zoom / Size
AD	 Audio / Lang I/II	3	 3
TV / PC	 +  Shift + Fav / Marker / PC	2	 2
Search	 +  Shift + Red / Netflix /	1	 1
App	 +  Shift + Green / APP /	T.Opt	 +  Shift + Setup / OPT / Tools
TV / Radio	 TV/Radio /	Energy Saving	 Eject / Surround
Guide	 Guide / EPG / -/--	My APPS	 +  Shift + Smart / List
Info	 Info / Angle		
Recent	 Sleep / Timer		
9	 9		
8	 8		
7	 7		
Live Menu	 Display / Media		
6	 6		

