








































 

 
 
 




















 

 
 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power		Power	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Back		Back / Return	
Vol +		Vol+	
Vol -		Vol-	
Home / Smart		Menu / Home	
3D	 +  Shift + 3		
Mute		Mute / Dimmer	
P +		CH+ / Page+	
P -		CH- / Page-	
Ratio		Picture / Format	
List		Smart / List	
Q.Menu		D.Menu / Top	
		Subtitle	 Subtitle / EQ
		Settings	 Setup / OPT /
		>>	 >>I / Preset+
		>>	 >> / Tune+
		Play	 Play / Slow
		AD / PIP	 Sound / Title
		<<	 I<< / Preset-
		<<	 << / Tune-
		Rec	 Rec / Rec Mode
		Pause	 Pause / Step / Freeze
		Text	 Text / Goto
		FAV	 Fav / Marker / PC
		Exit	 Exit / Cancel / Clear
		Input	 AV / Input / RDS
		Blue	 Blue / Prime Video / Random
		Yellow	 Yellow / YouTube / Repeat
		Stop / Live TV	 Stop / Hold



Originalfernbedienung Ersatzfernbedienung

AV Mode	 + 	Shift + AV / Input / RDS
Green		Green / APP / Repeat
Red		Red / Netflix / Search
0		0
AD		Audio / Lang I/II
TV / PC	 + 	Shift + Fav / Marker / PC
Search	 + 	Shift + Red / Netflix /
App	 + 	Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/--
Info		Info / Angle
Recent		Sleep / Timer
9		9
8		8
7		7
Live Menu		Display / Media
6		6

Originalfernbedienung Ersatzfernbedienung

5		5
Q.View	 + 	Shift + Display / Media
4		4
Live Zoom		Zoom / Size
3		3
2		2
1		1
T.Opt	 + 	Shift + Setup / OPT / Tools
Energy Saving		Eject / Surround
My APPS	 + 	Shift + Smart / List

