 

 

 

 

 

 

 

 


 

 

 

 

 







 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Vol+		Vol+
	Mute/AD		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Home/Recent		Menu / Home
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	Wheel Up		>> / Preset+
	Right		Right
	OK		OK
	Wheel Down		<< / Preset-
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	3D		Picture / Format
	Source		AV / Input / RDS
	*		D.Menu / Top
	Text		Text / Goto
	T.Opt		Setup / OPT /
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

