



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Tv Channel-		Ch -
	Tv Channel+		Ch +
	Power Tv		Shift + Power
	Tv Vol-		Shift + Vol -
	Tv Vol+		Shift + Vol +
	Tv Mute		Shift + Mute
	Tv Input		AV
	Open / Close		Eject
	Band		Red
	DVD / Karaoke		Green
	Aux		Yellow
	USB		Blue
	VSM / Virtual		Format
	1		1
	2		2
	3		3

**Originalfernbedienung Ersatzfernbedienung**

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	XTS Pro		Media
	Marker		TV/R
	Search		Shift + TV/R
	Audio / Male		Dual
	Sound / Female		Shift + Dual
	Subtitle / Shadow		Subt
	Return		Back
	Setup		Options
	Display		Info
	Up / Preset +		Up

 
 





 






 




 




**Originalfernbedienung    Ersatzfernbedienung**

	Down / Preset -		Down
	Right / Tun +		Right
	Left / Tun -		Left
	Menu		Menu
	Title		Smart
	<< Scan - /		<<
	>> Scan + /		>>
	Play		Play
	l<< / Key Con. b		l<<
	>>l / Key Con. #		>>l
	Pause / Step		Pause
	Repeat		Text
	Repeat A-B		Shift + Text
	Stop		Stop
	Volume +		Vol +
	Volume -		Vol -
	Prog / Memo.		Shift + Sleep

**Originalfernbedienung    Ersatzfernbedienung**

	Clear		Exit
	Zoom		Shift + Eject
	Mute		Mute
	Sleep		Sleep
	Dimmer		3D
	Echo Vol -		Shift + Down
	Echo Vol +		Shift + Up
	Mic Vol -		Shift + Left
	Mic Vol +		Shift + Right
	Enter		Ok

